

THE FOG MACHINE

Instructions

⚠ DANGER:
Nozzle is HOT
Do not touch nozzle or stand
within a distance of 3 feet.

⚠ ATTENTION:
UNPLUG when
not in use.

IMPORTANT: PLEASE READ ALL THE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

SPECIFICATIONS:

Input power: 120 volts, 60Hz, 400 W • Fuse Type: 125 Volts, 4 Amps. Quick Acting. • Tank Capacity: 0.80 Quart(750ml)

• Warm Up Time: Approximately 5-7 Minutes. • Fog Output: Approximately 1,908 cubic feet per minute.

WARNING: Strobe lights have been known to trigger seizures in people with photosensitive epilepsy.

WARNING: This product is recommended for Indoor Use Only. To reduce the risk of fire or shock hazard, do not expose this product to rain, moisture or dust.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT OPEN THE COVER.
NO USER-SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

CAUTION: To provide continued protection against risk of electric shock, connect to properly grounded outlets only. The fog machine is equipped with a three-wire grounding type plug. This plug will only fit into a grounding type AC power outlet. This is a safety feature. If you are unable to insert the plug into your AC power outlet, contact your electrician to replace your outlet. Do not defeat the purpose of the grounding-type plug.

CAUTION:

- Vapor from the fog machine may be irritating to some persons with allergic sensitivity.
- Do not expose at close range to known asthmatics.
- Use in a well ventilated area.
- To avoid injury from hot steam - keep at least three feet away from nozzle.
- Hot surface. Avoid contact, always use the handles to carry the fog machine.

OPERATING INSTRUCTIONS:

1. Always place this product on a flat, stable, heat-resistant surface, keeping the unit level.
2. Unscrew the cap on the top of the fogger and fill with Fog Solution. Close the cap tightly. Always make sure there is enough fluid in the tank before using the fog machine.
3. Plug the A/C power cord into a standard A/C grounded wall outlet.
4. Plug the cord of the Timer Controller into the outlet on the back of the Fog Machine.
5. Turn the ON/OFF switch located on back of fog machine to the ON position.
6. Press the Red power button located on the Timer Controller to ON.
7. It will take approximately 5 to 7 minutes for the fogger to warm up. When fully heated, the red power indicator light and the green indicator light will both light up indicating that the machine is ready.
8. Turn volume controller clockwise for sound and turn light controller clockwise for light.
9. When not in use, please turn the ON/OFF switch on the back of the fogger to the OFF position and unplug the A/C power cord from the wall outlet.

TIMER OPERATION:

1. Press the Yellow Auto Control ON/OFF button "ON".
2. Adjust the knobs to the desired levels:
 - a. Duration: adjusts the fog release time from 5 to 30 seconds.
 - b. Interval: adjusts the time between fog releases from 30 to 120 seconds.
3. The Yellow light will automatically light up when the timer is ready. After the light appears, the fog will only be released after the Interval Time passes.
4. When the fogger cools below its required operating temperature - the indicator lights on the Timer Controller will turn off. The fogger will reheat for a period of time between 60 to 80 seconds PLUS the Interval Time, before releasing additional fog.
5. Pressing the Green Manual Control button will over ride the Yellow Auto Control.

MANUAL OPERATION:

1. Simply press and hold the green button on the timer control for the desired duration of spray. The fogger will spray up to 35 seconds. The fogger will automatically stop when it needs to reheat.
2. Release the green button and wait for the light to come on before manually operating again.


Replace the fuse:

- a) Grasp plug and remove from the receptacle or other outlet device; Do not unplug by pulling on cord;
- b) Open fuse cover, with phillips screwdriver; remove fuse carefully;
- c) Replace fuse only with 4.0Amps, 125Volts fuse;
- d) Close fuse cover.

* See reverse side of page for additional safety information.

WARNING:

- *Disconnect power before changing fuse.
- *Do not remove cover: No serviceable parts inside.
- *Use only with adult supervision.
- *Do not operate without Liquid.
- *Recommended for inside use only.
- *Keep in dry area.
- *Do not immerse in water and ne pas immerger.
- *Household type.

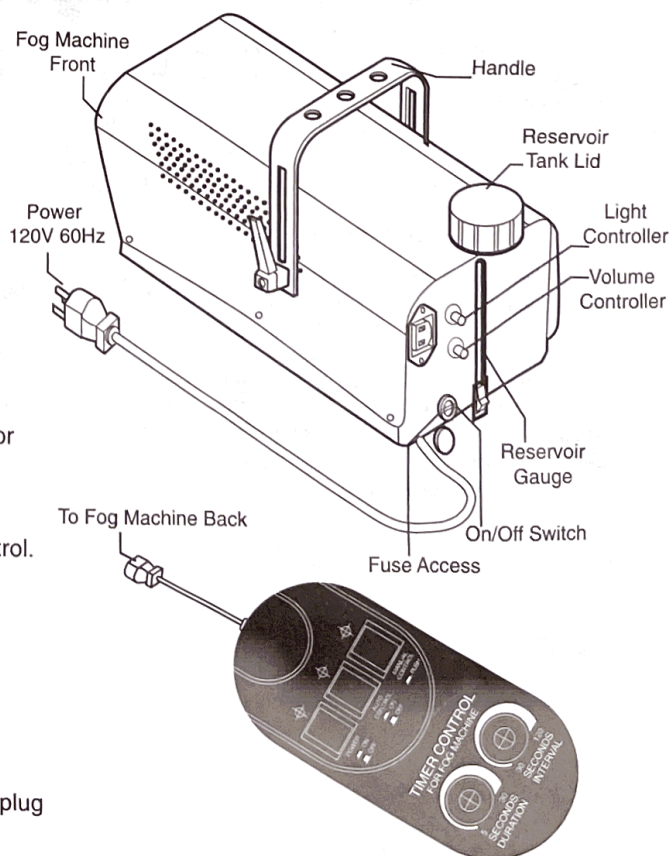

MADE IN CHINA

Item No. 28673



SAFETY INFORMATION:

1. Not recommended for any other use.
2. For adult use only. Keep out of reach of children and pets. When children or pets are present, close adult supervision is necessary.
3. Always operate the fogger in an open, well-ventilated area.
4. Keep the nozzle 20" clear of contact with anything while in use.
5. Allow at least 8" free air space around the sides and top of the unit to allow for adequate ventilation. Never cover or block air vents.
6. To prevent the risk of fire, do not use the timer with other products.
7. To reduce the risk of fire or shock, do not expose the product to rain, moisture or dust. If water or dust gets into the housing, unplug the unit immediately and contact a qualified service technician.
8. Do not leave unattended while in use. Always unplug the unit from the electrical outlet when unattended.
9. Do not allow the power cord or the timer cord to hang or rest in a way that it can be tripped over or pulled.
10. Use with a 3-prong, grounded electrical outlet only.
11. Do not operate within 3 feet of electrical devices such as refrigerators, televisions, microwaves or heaters.
12. Activating the pump without fluid can cause damage to the pump and heater.

QUICK SAFETY AND OPERATING TIPS:

- * Always use The Fog Machine with Adult supervision.
- * Never Drink the Fog Solution.
- * DO NOT expose Fog Spray to known Asthmatics or allergenic sensitive people
- * The Machine is not water-proof or splash-proof. When outdoors, use under a covered area.
- * When Indoors, use in well-ventilated areas to avoid setting off smoke detectors.
- * Use with Caution. It is normal for residue to build up under the nozzle and drop to the floor. This can cause a slick area and create slipping hazard.
- * Keep The Fog Machine Nozzle at least 2 feet away from any person or objects. Small bursts will spray out while the machine is waiting for the next spray cycle.
- * The fog spray output is very hot! Never aim the nozzle at people or pets.
- * Do not move the machine while in operation. Allow the unit to cool before handling or servicing.
- * Always place the Fog Machine on a flat, stable surface.

Frequently Asked Questions of Fog Machines & Fog Solution

Q: Is fake fog safe to breathe?

- A: Most fog machines use fog solution made of a combination of water and a chemical called glycol which has been found to be safe and is not considered hazardous to humans. Fog machines and fog solution can generally be used without problems. However, some people do complain of respiratory problems or throat irritation when exposed to theatrical fog. Because the fog can be irritating or drying, extended periods exposure to the fog should be minimized.
- * If the fog machine is used indoors you should make sure the room has adequate ventilation.
 - * It is a good idea not to breathe the fog for extended periods of time.
 - * DO NOT expose the fog at close range to known asthmatics or allergenic sensitive people.

Q: Will fog smoke set off Smoke Detectors or Sprinkler Systems?

- A: Yes, It is possible that the water-based particles could set off some types of smoke detectors. Usually, this is only a problem with optical-type detectors, because they sense the particles as smoke.
- * Sprinkler Systems on the other hand are usually triggered by heat, so the fog in the air will not activate heat-activated sprinkler systems.
 - * We recommend you run a test when used indoors to see if the fog will activate any smoke detectors. Also, when using the fog machine indoors, we recommend that the room have adequate ventilation.
 - * Also, if you spray a lot of fog in a small room, you will see a very thin film of residue on everything in the room. It may feel slightly sticky but is not harmful.

Q: Can food coloring or scented fluids be added to the fog solution?

- A: No. Never add materials of any kind (i.e. oil, gas, perfume, food coloring) to the fog solution.

Q: Can I use a Timer Remote Control on my Fog Machine that was made for a different fog machine?

- A: No. You cannot use a different manufacturer's remote on a Gemmy Fog Machine. Gemmy's remote control timers are wired specifically for Gemmy Fog Machines and its voltage requirements.

Q: Can I make my own Fog Solution?

- A: No. We highly recommend against trying to make your own fog solution. The chemical content of Gemmy's Fog Solution is designed around the specifications of the Gemmy Fog Machine. A home made fog solution will not be safe, hazard-free and as efficient as a commercial version. Only The Fog Machine™ brand Fog Solution or similar water-based fog liquid is recommended.

Q: What do I do if my Fog Machine stops working?

- A: The fog machine does not have serviceable parts inside. Do not open the cover. Replace the fuse only with 4.0Amps, 125 Volts. If your machine still does not work, contact Gemmy Industries at 1-800-231-6879 extension 444.

Don't Touch! Fog Machines Get Hot.

Always use the attached hanging bracket as a handle when carrying the fog machine. Allow the fog machine to cool down before moving or hanging. Also, do not touch the nozzle where the fog sprays out. This can become very hot. Make sure you place the fog machine in a place away from combustible materials, i.e. curtains, leaves, paper, etc.

Check Your Level of Fog Solution.

Be sure to periodically check the level of Fog Solution, particularly when using the Timer Control function. Fill the fog machine tank up and then check it about every half-hour. One of the main causes of a burned out pump motor is running the machine without fog solution.

Q: Is fog blowing directly onto Food or Pets harmful?

- A: It is not recommended that the fog from the fog machine be blown directly onto food or pets. The fog spray will leave a light residue on surfaces, similar to a hot shower on a mirror. Again, use in well ventilated areas.

Q: How much solution will my Fog Machine use?

- A: This depends on many variables such as the volume of fog you set the machine to produce and the frequency of the sprays. In general expect a quart of juice to last 2 to 3 hours.

Q: Can I make the fog stay low to the ground?

- A: The fog produced by a fog machine comes out hot and naturally rises in the air. Use shorter and more frequent bursts of fog to keep the fog as low to the ground as long as possible.

Q: Can I use water in my Fog Machine?

- A: No. Water may cause permanent damage to your Fog Machine.

PROPOSITION 65 WARNING:

Handling the coated electrical wires of this product exposes you to lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after use.

For customer service call:

1-800-231-6879 ext. 444

8:30 am to 5:30 pm central standard time

© 2006 Gemmy Industries Corp.

Coppell, TX 75019 U.S.A.

www.gemmy.com

MADE IN CHINA/FABRIQUÉ EN CHINE

