


LED STAR CURTAIN SERIES

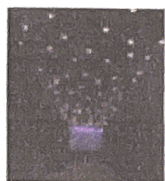

USER'S MANUAL

Blue white

Button state

MENU: "Exit options"; Exit options, and not out of the mode of operation. (exit a preceding function, need to determine a next function operation)

UP: "Add keys" or "selection key"; Increase a count = function numerical, move the menu.

DOWN: "Reduce key" or "down"; Reduce numerical function, move down the menu.

ENTR: "Sure key"; To determine to be into the selected function of the user (namely stop ongoing function, running the selected function of the user.



Menu function

PU--(PU01~PU17) from 1 to 17 different programs

ALL: All on

Sound: Sound active

ADDR: DMX512

SP--: Speed of program working (1~20) from fast to slowly.

Multi Controller [2.(Automatic)]			Multi Controller [2.(Automatic)]		
Program	Digital show	Effects	Program	Digital show	Effects
P1	PU--1	All Dimmer	P10	PU--10	One Group Blue and White
P2	PU--2	All dark to light	P11	PU--11	Two Group Blue
P3	PU--3	Automatic	P12	PU--12	One Group Blue and White
P4	PU--4	All strobe change	P13	PU--13	One Group Blue and White
P5	PU--5	All strobe	P14	PU--14	Blue strobe
P6	PU--6	Blue	P15	PU--15	White strobe
P7	PU--7	WHITE	P16	PU--16	Blue strobe
P8	PU--8	Blue	P17	PU--17	White strobe
P9	PU--9	White	无	无	无

Automatic Function Setting

DMX Channels Function

Channels	Range	Functions
1	0~255	Total control of brightness , from dark to light
2	0~9	No effect
	10~255	Strobe
3	0~255	White light brightness adjustment, from dark to light
4	0~255	White light brightness adjustment, from dark to light
5	0~255	White light brightness adjustment, from dark to light
6	0~255	White light brightness adjustment, from dark to light
7	10~255	Program selection
8	0~255	Process running speed adjustment

Maintenance

The LED star curtain is almost free of maintenance. If some of LEDs become dead, you just need to replace the dead ones with the spare LEDs attached in the package.

To replace the LEDs, first of all, unplug the device from the power supply. Unzip the cloth and find the dead LEDs. Hold the dead LED, and remove the clip from front side of the cloth. Change the LED, and put back the clip. Zip the cloth, and connect the device to the power supply.

To ensure the reliability of the LED star curtain, it should be kept clean. Keep it away from oil and other stains.

Specifications

Working Voltage: AC 90V-260V, 50Hz

Fuse: 3A (Power Supply), 10A (Control PCB)

Lamp: 160 pcs $\phi 5$ high power LEDs,

Channels: 8 channels

Operation modes: All LEDs on; DMX Control; Sound Activated; Auto run

NOTE: Due to improvement, the product specifications and this manual are subject to change without prior notice.