

ION[®]


Total PA[™] Glow Max

Quickstart Guide (English)

Guía de inicio rápido (Español)

Guide d'utilisation rapide (Français)

v1.7

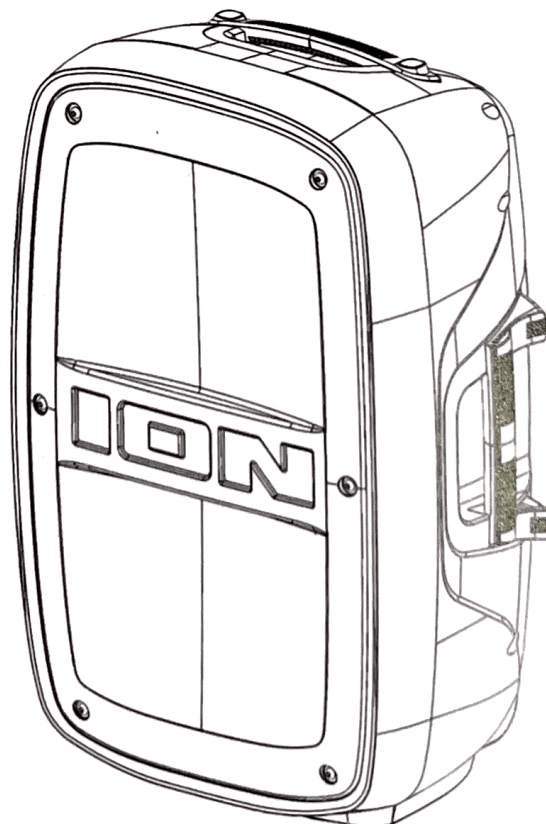

Total PA™ Glow Max Quickstart Guide (English)

For the full *User Guide* and the latest information about this product, visit ionaudio.com.

For additional product support, visit ionaudio.com/support.

For complete warranty information: visit ionaudio.com/warranty.

Box Contents

Total PA™ Glow Max	Power Cable (5 ft. / 150 cm)	Microphone with cable (15 ft. / 450 cm)
Remote Control	Speaker Stand	Quickstart Guide

Features

- A. **Display:** This screen shows information relevant to Total PA™ Glow Max's current operation. The Display comes with a plastic protector on it. Carefully remove this for optimal viewing. See the full *User Guide* to learn more.
- B. **Control Knob:** Turn this knob to adjust the main volume (overall output) of the loudspeaker. Push this knob to select and make adjustments to the mic 1 volume, the mic 2 volume, source volume (radio, USB, SD, Bluetooth® signal, and aux input), echo effect, high EQ, and low EQ. The volume of Total PA™ Glow Max does not affect your Bluetooth device volume. For the best sound quality, set your input source volume to 100% and use the Source and Main Volume control of the speaker to adjust the volume.
- C. **Next:** Press this button to tune in a radio station or go to the next track on a Bluetooth connected device, SD card, or USB drive. Press and hold in radio mode to seek.
- D. **Play/Pause:** Play/pause the USB, SD, or Bluetooth source. In USB/SD mode, double-press this button to stop playback and return to the beginning of the list of files. In Radio Mode, press this button to select a previously saved preset station. To save the current station as a preset, press and hold this button, use the Tune/Track buttons to select which preset you want to save it to, and press this button again to confirm. In Bluetooth mode, press and hold the Play/Pause button for 5 seconds to disable voice prompts.
- E. **Previous:** Press this button to tune in a radio station or go to the previous track on a Bluetooth connected device, SD card, or USB drive. Press and hold in radio mode to seek.
- F. **Repeat/Link:** in USB or SD mode, press this button to repeat a single track, folder, or all tracks. Press and hold this button to start stereo linking to another compatible ION speaker (see ionaudio.com for a list of compatible speakers). See the full *User Guide* to learn more.
- G. **Mode:** Press this button to select the audio source to use: USB, SD, FM radio, Aux, or Bluetooth.
- H. **Lights:** Press this button to toggle between five modes for the lights on the front panel.
- I. **USB Port:** Connect a USB flash drive here to play supported audio files. You can also use the USB port to charge a device. To charge a device that is streaming music via Bluetooth, pause the music first and then wait for it to reconnect after the USB cable is inserted.
- J. **SD Card slot:** Insert an SD card here to play supported audio files.
- K. **Mic Inputs (1/4" / XLR):** Connect a microphone or mic-level source to these inputs.
- L. **Aux Inputs (1/8" stereo / XLR line-level):** These inputs can be used to connect a CD player, MP3 player, or other audio source.
- M. **Mix Output (XLR):** Connect this output to a speaker, mixer, or recorder.
- N. **Clip LED:** The Clip LED will flash red if the signal from the input jacks or media panel audio source is clipping. If this happens, decrease the main volume using the **Control Knob** or the source, or the mic volume (if a loud device is plugged into either).
- O. **Power Switch (not shown):** Flip this switch to toggle the speaker's power on or off.

