 


Hand-held Steam Hanging Ironing Machine

Instruction Manual

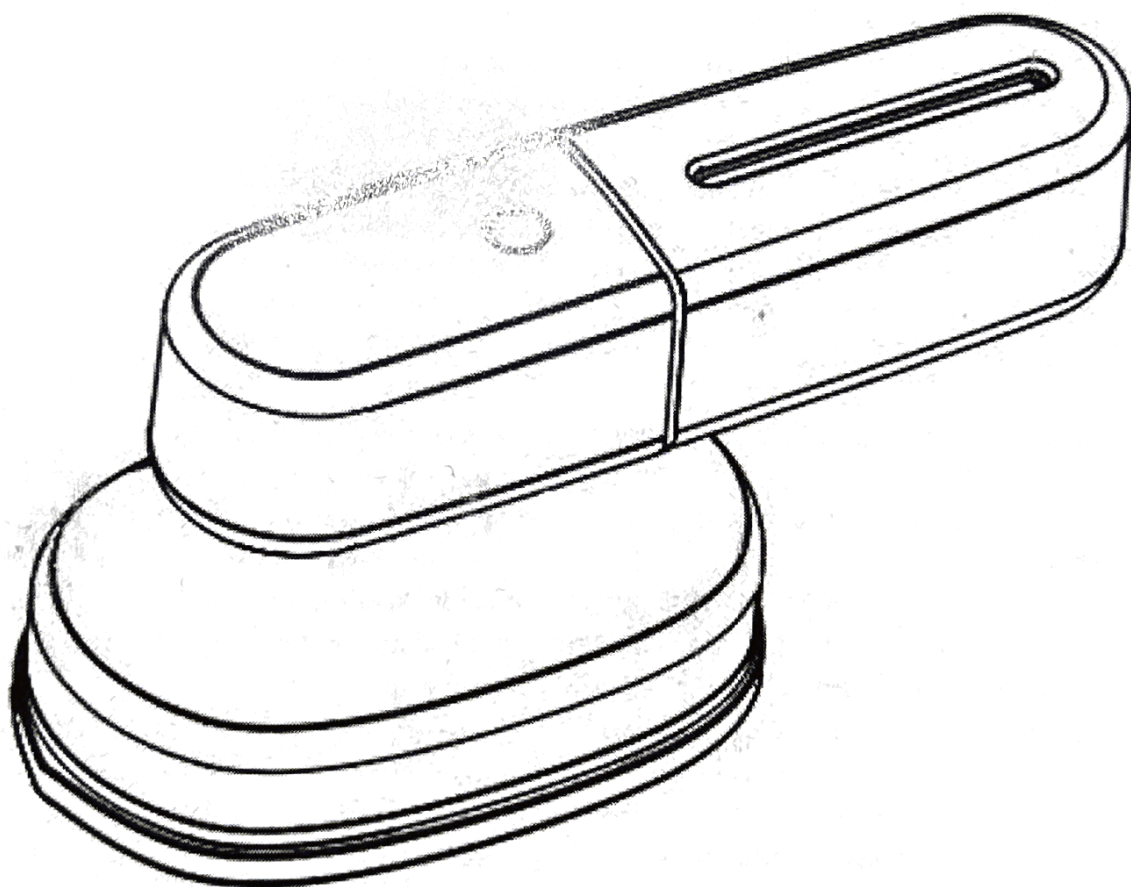

Please read this manual carefully and keep it properly before use

Important safety matters

△ If there is a small amount of water drop on the inner wall of the water tank, it is caused by the inspection of the product. Please rest assured that it is normal.

△ **DANGER!** Do not immerse the product in water or other liquids.

Please read the instruction manual carefully before use and keep it

1. Please read the instructions and diagrams carefully before using this product.
2. When using for the first time, please check whether the voltage, power and other parameters shown on the model plate of this product are consistent with those at your home.
3. Before using the product, check whether the product power cord is in good condition.
4. Do not use when the product is damaged.
5. **If the power cord is damaged, it must be replaced by professionals of the manufacturer, its maintenance department or similar departments in order to avoid danger.**
6. Do not use high-power electrical appliances on the same line to prevent circuit overload and danger.
7. Do not let the power cord touch the hot surface of the electric iron. Do not collect the electric iron until it is completely cooled. When collecting the electric iron, gently coil the power cord around the iron.
8. When adding water to the electric iron water tank, the water level shall not exceed the maximum water level. When adding water, please use distilled water or purified water, and do not use tap water or other liquids containing impurities. Do not pour vinegar or other detergent into the water tank. Do not use chemically treated water.
9. After each ironing or when temporarily stopping ironing, remember: disconnect the power supply.
10. Please be careful not to let children touch the heated product and pull its wires. The collection shall be placed out of the reach of children, and children shall not play as toys.
11. Due to the oiling on some parts of the product, there may be a little light smoke during initial use, and this (harmless) phenomenon will stop after a while.
12. The steam emitted by the product is very hot and dangerous. In order to avoid scalding, do not direct the steam directly to the human body, and do not put the steam panel close to any object that is not resistant to high temperature.
13. During the power on or use of the electric iron, it must be monitored in the whole process and cannot operate without supervision. During the power on of the electric iron, the user shall not leave halfway.
14. The electric iron must be used and placed on a stable plane; when placing the electric iron on its support, ensure that the support is placed on a stable surface.
15. The appliance cannot be connected to DC power supply.

16. When using the electric iron, do not touch the hot surface by hand. The hot surface includes the

bottom plate and the surface printed with "  ".

17. If the electric iron falls, shows visible signs of damage or leaks, then the electric iron cannot be used.

18. The original accessories are only applicable to this machine. Any accessory not provided by the original factory will cause fire, electric shock or damage to the machine.


19. This product is not recommended for people with physical, sensory, mental or motor disabilities (including children), or people without experience and relevant cognition to use this machine, unless they obtain clear instructions from their guardians for the safe use of this machine.

20. Do not use the extension cord when using this product. If you must use the extension cord, please use the power cord above 16A, and do not share the extension cord with other household appliances at the same time, because it may overheat or fail to use electricity when it is below 16A or sharing the same extension cord with other household appliances. When using the extension cord, please be careful not to trip the power cord or pull out the cord suddenly.

Warning:

1. After using this product, please pour out the excess water in the water tank, then let the product work until there is no steam (dry the residual water in the steam generator), turn off the machine, and clean and store it after it is completely cooled.
2. In order to prevent electric leakage and other hazards, the machine must be turned off and the power plug must be unplugged when adding water and cleaning.
3. If the product cannot work normally or has any damage, such as fuse, heating system and other parts, it must be replaced by professionals at the after-sales service point designated by our company.

Product introduction

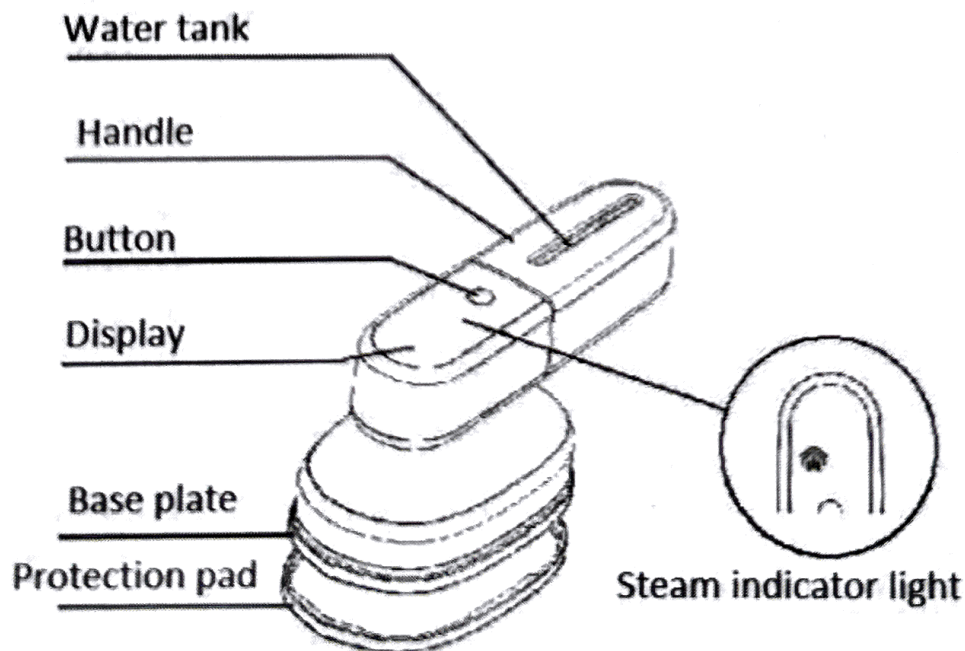

Temperature setting

The temperature controller of this product is non adjustable, and the iron will heat automatically after power on. The panel temperature is set to 145℃± 20℃, please do not iron low-temperature fabrics directly.


Product parameters

Product Name:	Hand-held steam hanging ironing machine
Product model:	U5
Executive standard:	GB4706.1-2005 GB4706.2-2007 GB4343.1-2018 GB17625.1-2012
Base plate type:	Ceramic plate
Product size:	191×79×88mm
Water tank capacity:	65mL

Instructions


I. Water tank disassembly


Rotate 45 degrees counterclockwise and remove the water tank.

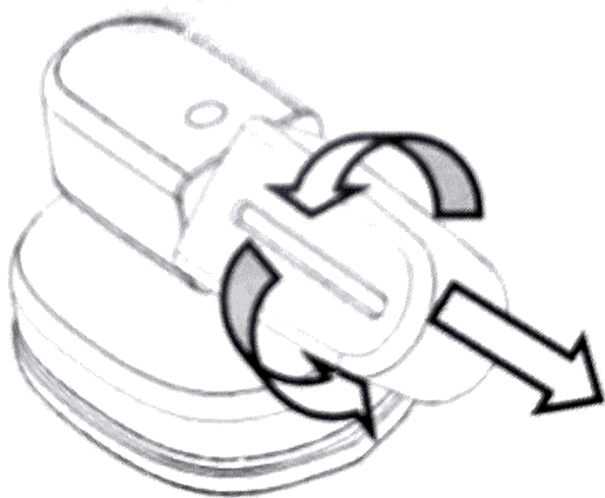


II. Adding water

1. Open the water filling port cover, fill an appropriate amount of water in the dosage cup, align it with the water filling port and slowly pour it into the water tank.
2. Put the water filling port cover on after water filling, put the product in the front of the water tank to the left, and rotate clockwise to complete the assembly.

 When injecting water, it must not be higher than the maximum water level.

 Tips for adding water: please use purified water or distilled water.

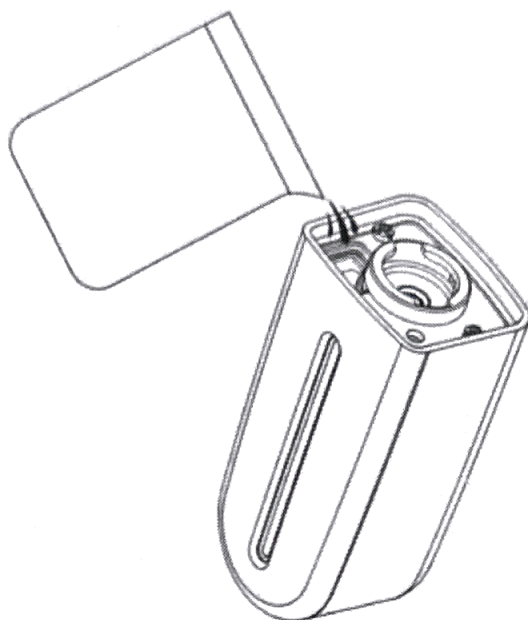



III. Dry ironing

1. After power on, the product begins to heat. The power indicator starts flashing. When the power indicator stops flashing and the heating is completed, ironing can be started.
2. Since the temperature of this product is not adjustable, please do not iron the low-temperature fabric directly. It is recommended to cover the fabric to be ironed with a wet wool cloth first.






IV. Steam ironing

1. After power on, the product starts to heat and the heating indicator starts to flash. When the power indicator stops flashing and the heating is completed, touch the button to switch and start the electric pump to the steam state. Continuous steam is generated, which can penetrate the fabric surface for ironing.

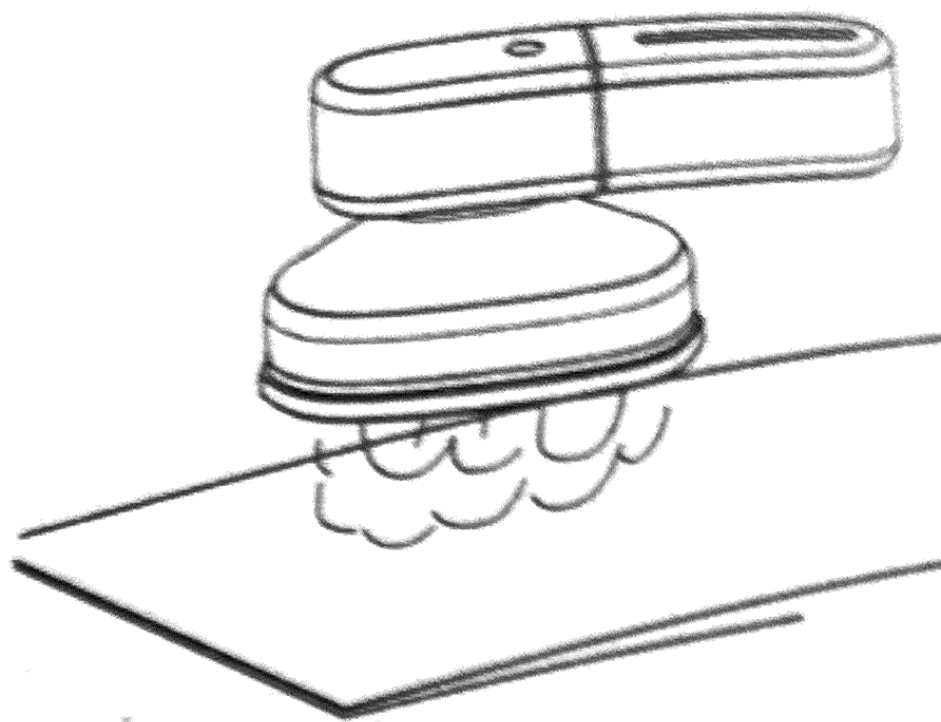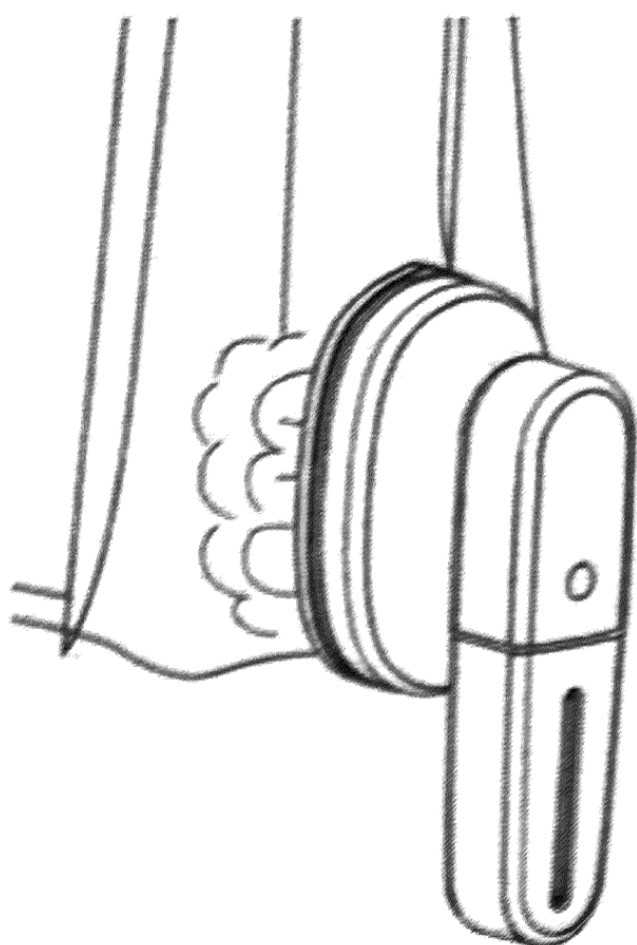


2. Gently touch the button to switch to the steam gear, and steam will be ejected from the bottom plate hole.

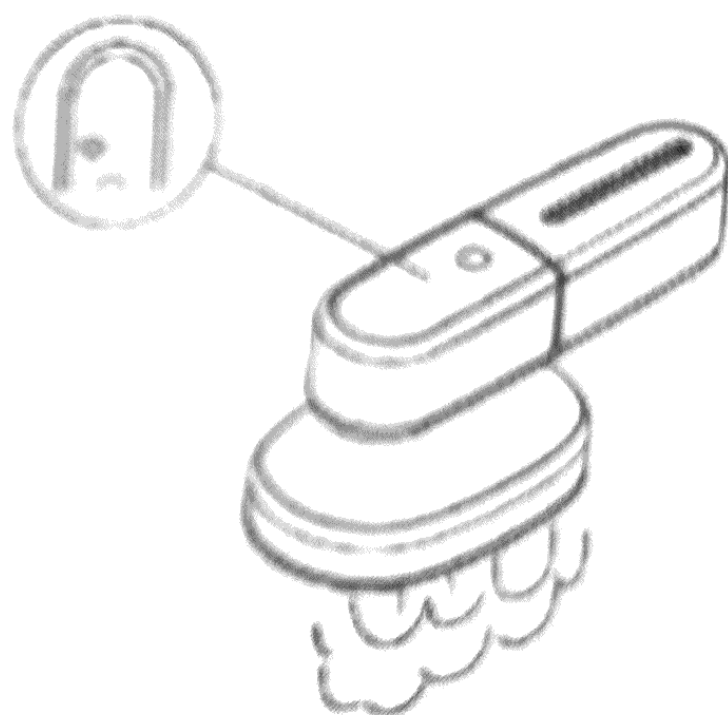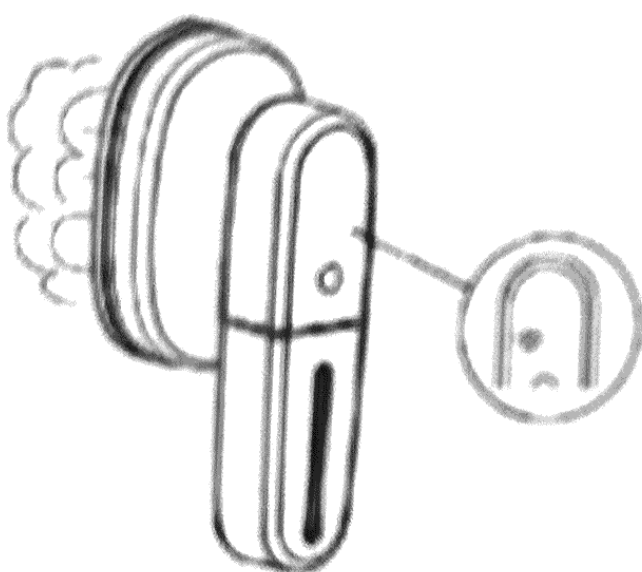

 Do not iron or spray steam on clothes to avoid high temperature burns.

V. Accessory use

1. After suspension of use, please place the product flat on the high-temperature resistant bottom plate protective pad to avoid scalding the object surface at high temperature.
2. When collecting the iron, please put on a protective pad to prevent the bottom plate from being scratched by sharp objects.

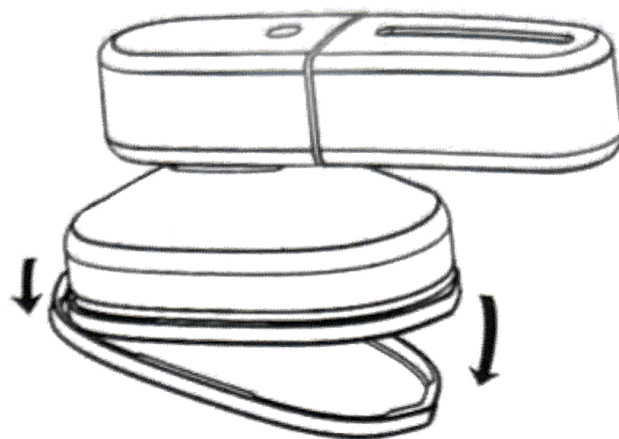

VI. Cleaning and collection

1. Do not clean the electric iron until the electric iron has completely cooled down.
2. Clean the bottom plate and appearance of the electric iron with wet cotton cloth. Do not use rough or hard things to clean the electric iron to avoid scratching the bottom plate.
3. Use wet cotton cloth dipped with neutral detergent to clean, and do not use strong acid or alkali to clean.
4. When there are impurities in the steam of the bottom plate of the electric iron, please use a bamboo stick to remove them, and do not use a metal awl to remove them, so as not to hurt the bottom plate.
5. When collecting the electric iron, you must wait until the bottom plate is completely cooled.
6. After gently winding the power cord around the electric iron, the electric iron must be placed in a place not easy to reach by children.

VII. Common faults and troubleshooting

Common problem	Reason	Processing method
It doesn't work at all and the indicator light doesn't light up	The power cord plug is not plugged into the power cord	Plug the power cord into the electrical socket
	The power board is damaged	Ask professional personnel to check and repair
The machine cannot eject steam, but the switch indicator light is on	The water tank is not filled with water	Fill the water tank with an appropriate amount of water
	Thermal fuse is damaged	Ask professional personnel to check and repair
	Thermostat is damaged	
	The circuit board is faulty	
The nozzle base plate is hot and can be used normally, and the indicator light is not on	The indicator light is broken	Ask professional personnel to check and repair
Too little steam	The voltage is too low	Please avoid using this product during peak hours
Sprinkler sprays	A small amount of water ejected after startup	It is normal
	Insufficient panel temperature	
	Heating pot does not work	Ask professional personnel to check and repair
water tank is leaking	Water tank ruptures	Press the lid of the water tank tightly
		Ask professional personnel to check and repair
Water leakage of the whole machine	The water pipe in the machine is damaged	Ask professional personnel to check and repair
Deformation of water tank	When in use, high-temperature hot water is added	Ask professional personnel to check and repair